Restrict Use of PS4 Features

If minors will be using the PS4[™] system, parents or guardians can restrict the use of its features as necessary. To restrict use of PS4[™] system features, select [Parental Controls] > [Restrict Use of PS4 Features].

The parental controls passcode must be entered to set or change feature restrictions. The default passcode is "0000".

These settings apply to all users of your PS4[™] system.

<u>Games</u>

You can restrict the use of games that have age limitations.

In addition to [Allow], there are 11 parental control levels. The lower the parental control number, the tighter the restriction. The default setting is "9". The combination of the parental control level you set on the $PS4^{TM}$ system and the parental control level for the game determines whether a game can be played. For example, if you want to restrict use of a game with a parental control level of "4", set the $PS4^{TM}$ system's level one number lower to "3". Setting the level on the $PS4^{TM}$ system to "3" prohibits users from playing any games with a level of "4" or higher.

Checking parental control levels of games

Games on discs are sold in packaging that is labelled with rating level information. Use the following table to see how game rating levels correspond to parental control levels.

To check the parental control level for a game on screen, select the game in the content area, press the OPTIONS button, and then select [Information]. If a game has age restrictions, the parental control level will be displayed in the [Parental Control] field.

Combinations of game rating labels and parental control levels

Parental control level	1	2	3	4	5	6	7	8	9	10	11
Approximate age of user	0~	3~	6~	10~	12~	14~	15~	17~	18~	-	-
Japan			CERO 全年齢対象								

North America/Central America and South America*1		FANTY CHILDHOOD FORES ENVENTS	EVENONE EXIFANTS ET ADULTES SECTION AND AND ESCRIPTION AND AND ELEMENT AND AND AND ELEMENT AND AND AND ELEMENT AND		TEEN ADOLESCENTS Section Anthony Pro-			
Europe*2/Africa*3/India		3 www.pegi.info	Www.pegi.info		12 ^m www.pegi.info	16 www.pegl.info	18 www.pegl.info	
Portugal		4. www.pegi.info	www.pegi.info		12 ^m www.pegi.info	16 www.pegl.info	18 www.pegl.info	
Germany	USK ab D misageter		USK ab December		USK 12 requisiter	usk 16	18 18	
				10				
South Africa		PG	7-9PG	10-12PG	13	16	18	
Australia	Ġ		PG			$\overline{\mathbb{M}}$	restricted *6	
						M	18	
New Zealand	G		PG			13	16	
Russia	0+		6+		12 +	16 +	18 +	

Korea		7400 C	12410158-71	TEST CONST.	35 △ (44 (1 (2 m) 3)				
Taiwan	●	<mark>6</mark> 保護級	12 ⁺ _{輔12級}	15 _{輔15級}	18 ⁺ 限制級				
Singapore				Suitable For 16 & Above	M18				
Brazil*4		L 10 12 14 16 18							

*1

Excluding Brazil

*2

Excluding Portugal and Germany

*3

Excluding South Africa

*4

These ratings are not compatible with the parental control level of the PS4[™] system. Set the PS4[™] system's level by referring to the approximate age of users in the table above.

*5

Approximate age of user: 17~

*6

Approximate age of user: 15~

Blu-ray Disc™/DVD

You can restrict playback of Blu-ray Disc[™] or DVD videos that have age limitations.

Blu-ray Disc™

The default setting is [Allow]. In addition to [Allow], you can select a specific age. Select a lower age to tighten the restriction.

DVD

The default setting is [Allow]. In addition to [Allow], you can choose from 8 levels. Select a lower level to tighten the restriction.

Country or Region for Parental Control

Select the country or region for the disc's parental control restriction. The default setting is [United States]. It is usually not necessary to change this setting.

Internet Browser

Use this setting to prevent we (Internet Browser) from starting. The default setting is [Allow].

Web Filter

You can make use of a web filtering service that checks the type and safety of sites when the Internet Browser is being used and automatically prevents dangerous or harmful sites from being displayed.

Fees may apply for the use of services.

Select [New User] and Log In to PS4

You can use this setting to disallow guest logins and prevent sub account holders from creating new users. This will restrict others from logging in when parental controls have not been set for them. The default setting is [Allow].

Change Passcode

You can change the parental control passcode. Correctly enter the new passcode 2 times.

If you forget the passcode, you must initialise the PS4TM system. Handle the passcode with care. Do not forget it and do not let third parties obtain it.